

4DC Filter Cartridge

0.5 Micron Precoat Filtration for premium quality water, PLUS AgION® Antimicrobial protection



APPLICATIONS

Drinking water

Water coolers

BENEFITS

Micro-Pure II media with AgION™ antimicrobial protection inhibits potential bacterial growth

Provides clear, fresh, premium quality ingredient water for great tasting cold beverages

Everpure's unique filter blend using activated carbon reduces chlorine taste and odor and other offensive contaminants

Precoat submicron technology reduces dirt and particles as small as 1/2 micron in size

Reduces health contaminants such as asbestos fibers and Cryptosporidium and Giardia cysts

Sanitary cartridge replacement is simple, quick and clean. Internal filter parts are never exposed to handling or contamination

OPERATIONAL TIPS

Change cartridges on a regular 6 month preventative maintenance program

Change cartridges when capacity is reached or when pressure falls below 10 psi

Service flow rate must not exceed 0.5 gpm

Always flush the filter cartridge at time of installation and cartridge change

Everpure water treatment systems are covered by a limited warranty against defects in material and workmanship for a period of one year after date of purchase. Everpure replaceable elements (filter cartridges and water treatment cartridges) are covered by a limited warranty against defects in material and workmanship for a period of one year after date of purchase. See printed warranty for details. Everpure will provide a copy of the warranty upon request.



4DC Replacement Cartridge: EV9591-46

SPECIFICATIONS

Overall Dimensions:	14.5" H x 3.25" diameter
Service Flow Rate:	0.5 gpm (1.9 Lpm)
Rated Capacity:	3,000 gallons (11,350L) 40,000 9-oz. or 32,000 12-oz. vends
Pressure Requirements	10-125 PSI (0.7 – 8.6 bar)
Maximum Temperature:	35 -100°F (2- 38°C)
Electrical Power Supply:	None required

4DC Filter Cartridge

EV9591-46

INSTALLATION TIPS

This system must be installed and maintained according to the manufacturer's instructions, including installation and replacement of filter cartridges

Install vertically with cartridge hanging down


Never use saddle valve for connection

Use 3/8" water line

Allow 2 1/2" clearance below the cartridges for easy cartridge replacement

Flush system by running water through cartridges per Installation and Use manual

The contaminants or other substances removed or reduced by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.

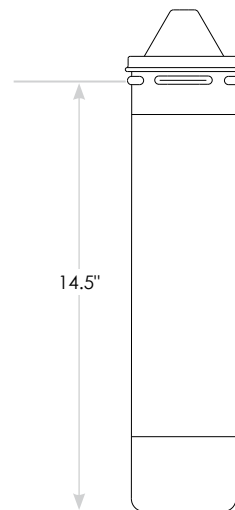

For Technical Assistance, please
email: servicespecialist@pentair.com
or call: 800-942-1153

Everpure reserves the right to update specifications,
change prices, or make substitutions without notice.



System Tested and Certified
by NSF International against
NSF/ANSI Standards 42 and
53 for the reduction of:

Standard No. 42 –
Aesthetic Effects
Chemical Reduction
Taste and Odor
Chlorine

Mechanical Filtration
Particulate Class I

Standard No. 53 –
Health Effects
Mechanical Filtration
Cyst

EV9591-46 4DC DE11



Liberty

Ersatzteile & Zubehör

Liberty Vertriebs GmbH
Bonner Straße 103
40589 Düsseldorf

Tel.: 0211-753520
Fax.: 0211-753575

Internet: www.libertyshop.de
Email: verkauf@libertyshop.de